

CONTENTS

QUICK REFERENCE GUIDE



PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS

 
STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

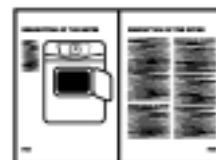

BOOKLET

SAFETY ADVICES BEFORE USING THE DRYER /
CONNECTIONS

PAGE 4

ELECTRICAL CONNECTION

PAGE 5

SAFETY ADVICES AND GENERAL
RECOMMENDATIONS

PAGE 6

DESCRIPTION OF THE DRYER

PAGE 7

REMINDER - MAINTENANCE AND CLEANING
VENT CONNECTION

PAGE 7

PAGE 8

DOOR REVERSIBILITY

PAGE 9

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

PAGE 10

SAFETY ADVICES BEFORE USING THE DRYER / CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Do not use electrical portable outlet devices.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures below 5°C or above 35°C.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer.
- Take care not to install the dryer on a deep-pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.
- The exhaust-air must not be leaded into a air-outlet conduit which is used for heating appliances fired with gas, oil or solid fuel.
- Pay attention that the air-inlet openings are unobstructed.

Stability:

When installing the dryer always carefully level the dryer adjusting the two feet and check the correct levelling with a spirit level.

To built in the dryer

- For security reasons do not remove the worktop.
- Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

Stacking kit

Your dryer can be stacked on top of your front loading washing machine. Please contact your dealer or our After Sales Service.

Minimum housing dimensions:

Width: 600 mm
Height: 855 mm
Depth: 560 mm



ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

 
1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

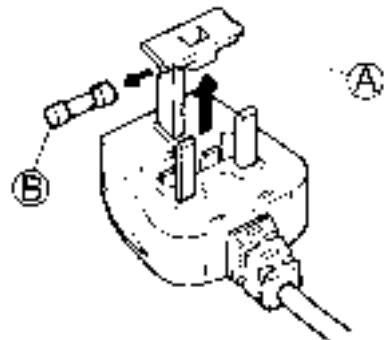

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

SAFETY ADVICES AND GENERAL RECOMMENDATIONS

1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol.

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy.
- Do not overdry the laundry.
- Clean the lint filter after every drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example: dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

3. Disposing of packaging and old appliances.

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

4. Child safety:

Children must not be allowed to play with the dryer. The appliance is not intended for use by young children or infirm persons without supervision.

5. General recommendations:

- The tumble dryer is intended only for drying textile material washed in water.
- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Do not use inflammable cleansing agents.
- Do not use the tumble dryer if industrial chemicals have been used for cleaning.
- Garments treated or contaminated with flammable cleaning sprays or liquids such as petrol, cooking oil or aerosol sprays must not be put in this dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Lighters must not be left in pockets.
- Never use and store flammable materials nearby the dryer.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged, clean it with water and a soft brush.
- Since lint can go through the filter, it is necessary to clean, from time to time, the complete filter area (including below the filter) with a brush, a damp cloth or with a vacuum cleaner.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.



Attention rear panel can be hot.

EC Declaration of Conformity

- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
- 2006/95/EG Low voltage Directive
- 89/336/EEC EMC Directive



- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



 
The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

- The dryer must be used in the household for the described uses.

DESCRIPTION OF THE DRYER

- A. Work top
- B. Contact pin
- C. Door
 - To open the door:
pull the handle
 - To close the door:
push gently until closed.
- D. Filter

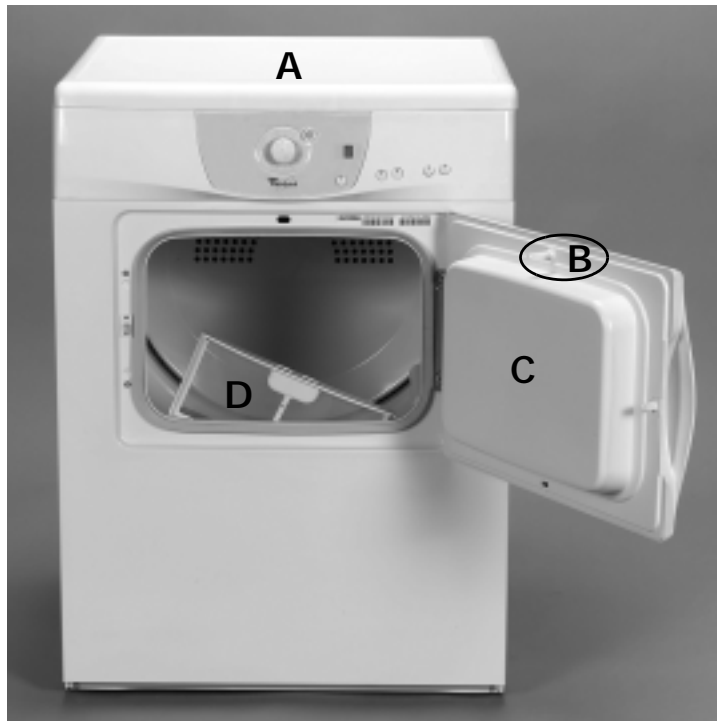

REMINDER - MAINTENANCE AND CLEANING

EACH DRYING CYCLE

- **Clean the lint filter at the end of every drying cycle.**
Open the door.
Pull the filter upwards.
Remove lint using a soft brush or your fingertips.
Push the filter back into place.

EACH THREE MONTHS

- Clean vent hose and connection regularly to avoid blockage due to lint or foreign objects.

VENT CONNECTION

Normally the hose and adaptor are not supplied; the accessory kit, available at your dealer or our After Sales Service, should be used.

Installing the vent hose

- A. Place a towel or the packing material on the right-hand side next to the dryer.
- B. Place the dryer on its right-hand side (seen from the front) on the towel or the packing material.
- C. Push the adapter into the hose (see illustration). Attach the air vent hose adapter to the connection located under the dryer and lock it by means of the foreseen lugs.

Venting outside

- Without kinking it, lead the vent hose outside (inside diameter 10 cm, maximum length with two bends 3 m).
- Ensure that the vent hose does not sag when stacking the dryer on a washing machine. It should only be placed horizontally or upwards.
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.
- Do not connect the air vent hose to a chimney or to a mechanical ventilation extractor duct.
- Do not connect the vent hose to the heating system. Only connect the hose to ventilation systems insulated against humidity.
- Please provide adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Dryer operation without vent hose

 
- Only use the dryer in a large, well-ventilated room.
- Keep the room free of dust and lint.

A minimum distance of 10 cm between rear of appliance and the wall must be observed.

Dryer placed close to the wall; venting to the left or right



Install the dryer by using the bi-directional kit, available at your dealer.

IMPORTANT

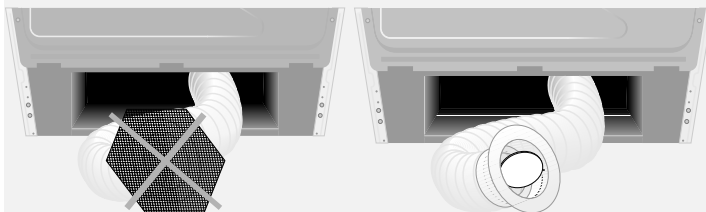

For example, alternative to be used.


 
 
- Do not connect to ventilation systems protected by fly nets. These can become clogged and cause malfunctioning of the dryer.

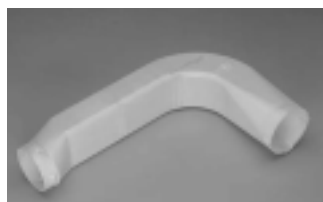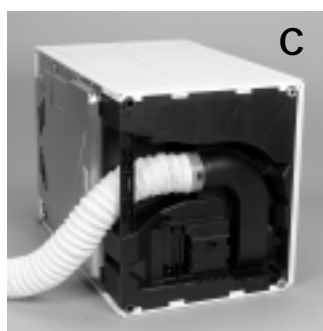

DOOR REVERSIBILITY

Door Reversibility

   - A. Unplug the dryer.
- B. Open the door.
- C. Using a spanner, turn the contact pin on the inside of the door (top) through 90° and remove it.
- D. Remove the 2 door hinge screws, followed by the door.
- E. Unscrew the 2 screws above and below the door lock system.
- F. Removing the door lock: using a screwdriver, press down on the small rib in the upper opening and extract the door lock by pulling it towards you.
- G. Reverse the door:
- H. Fasten the door on the desired side using the 2 screws.
- I. Insert the door lock system on the opposite side and lock it securely.
- J. Fix the 2 screws above and below the door lock system.
- K. Replace the contact pin in the inside of the door (top).

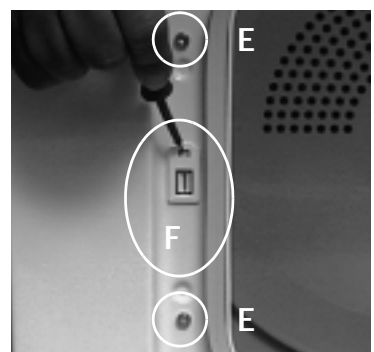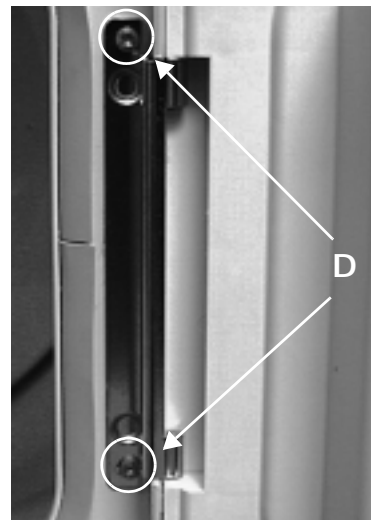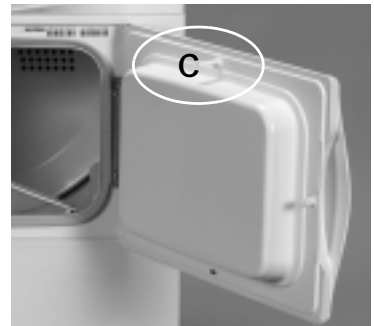

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?
- Does "END" and "Anti-Crease" LED's are lights up? - The drying cycle is terminated, the laundry can be taken out.

The dryer does not operate:

(following a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp light on:

- Is the lint filter clean?
- Is the vent hose blocked?
- Is the outside vent hose adaptor blocked ?

After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000



Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

Sort laundry according to care symbols:

-  **Do not tumble dry**
-  **Suitable for tumble drying - at low drying temperature**
-  **Suitable for tumble drying**

Sort by:

Material thickness: Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

Type of material: Cotton (linen); synthetic textiles (easy care).

Degree of drying: Cupboard dry, iron dry etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

Opening door

Pull the door handle.

Loading dryer

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

Selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

Selecting options (if available)

Select the option required by pressing the corresponding button. The indicator lamp above the relevant button lights up to confirm your selection. A fast blinking led indicates a wrong selection is made (incompatible options). Press the button again to cancel the option.

Starting dryer

The drying programme is started by pressing the “**Inicio (Pausa)**” button. The relevant indicator lamp lights up.

Changing programme selection: If the programme selected is changed during drying, the dryer stops. The Drying indicator lamps flashes. To operate the new programme, again press the “**Inicio (Pausa)**” button.

Interrupting programme: To interrupt the dryer during the drying cycle, set the programme selector knob to “Airing” “**Airear/arejar**” and press the “**Inicio (Pausa)**” button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the “**Inicio (Pausa)**” button again.

Warning: Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.

Programme end - unloading dryer

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.



End: Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).




Anti-Crease: If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

Switching dryer off

Set the programme selector knob to “Off”.

Cleaning the lint filter: Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Push lint filter firmly back into place.

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes					Options						Approximate drying times (in minutes)	
Programmes / Drying levels			Type of textile	Fabrics	Volume of load kg	Gentle Suave	Rapid Cotton Rapido Algod.	Buzzer Alarma/ alarme	Anti-crease Fácil	Start Delay Inicio diferido	Very wet load	Wet load
Cotton	Extra seco	Ready to wear	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry Algod. Max. 7 kg	3.0 7.0	X	X	X	X	X	85' 160'	70' 140'
	Guardar	Cupboard dry *	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.			X	X	X	X	X	70' 130'	50' 110'
	Facil	Iron dry *	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.			X	X	X	X	X	50' 110'	45' 90'
Mixed fabrics	Extra seco	Ready to wear	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry Sintéticos Max. 3.5 kg	1.0 3.5	X	-	X	X	X	25' 65'	20' 45'
	Guardar	Cupboard dry *	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.			X	-	X	X	X	20' 50'	15' 45'
	Facil	Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.			X	-	X	X	X	15' 45'	10' 40'
Delicate plus	Guardar	Cupboard dry	Low drying intensity for delicates and items labelled with  , such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc. Delicado plus Max. 2.5 kg	2.5	X	-	X	X	-	60'	45'
Airing	Laundry is aired and refreshed for 30 minutes without heating.			Airear/arejar	-	-	-	-	-	-	-	-
Drying times	Completes drying (suitable for all fabrics).			Temporizador 10' 20' 30' 40' 60' 90'	-	X	-	X	X	-	10' 20' 30' 40' 60' 90'	

How to proceed if ...

...you want to correctly care for and clean your dryer:

Clean the filter at the end of every cycle.



- Open the door.
- Pull the filter upwards.
- Brush lint using a soft brush or your fingertips.
- Push the filter back into place.

 
Please de-install once a year the air hose and remove the lint inside.

...you want to check the dryer yourself first:

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use).

Drying takes too long laundry is not dry enough.



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm?)
- Is the lint filter dirty (filter indicator light on)?
- Is the room temperature too high?
- Are the “End” and “Anticrease” “” indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- If the drying result does not meet your expectation, select a more dry programme.

The dryer will not operate (after a power failure, always press the “Inicio (Pausa)” button).



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the “Inicio (Pausa)” button been pressed?
- Has the start delay option been selected?

Lint filter indicator lamp on.



- Is the lint filter clean?
- Is the vent hose blocked?
- Is the outside vent hose adaptor blocked?

AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your after-sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

SERVICE 0000 000 00000



Before using the machine, please also read the instructions for use carefully!

AWZ 3669

Quick Reference Guide

GB



Programme selector knob

The drying programme is selected by turning this knob.

Inicio (Pausa)



"Inicio (Pausa)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

Programme sequence



Overdry protection

Drying

Anti-crease

End of cycle

Options



Suave



Gentle

Reduces drying intensity (recommended for delicate items).



Rapido Algod.



Rapid cotton

Shortens drying duration (recommended for thin items of the same size).



Alarma/alarma



Buzzer

Signals/sounds end of drying cycle.



Fácil



Anti-crease

Prevents laundry from creasing up to 12 hours. Buzzer and Anti-crease cannot be selected together.



Inicio diferido



Delayed Start

Delays the start of the drying cycle by 1 to 12 hours. Each time the button is pressed, the start time is delayed by 1 hour.

Then press the "Inicio (Pausa)" button to confirm the final selection and to start the dryer. The delayed start indicator lamp flashes and the countdown counts down in 1-hour intervals. The countdown is indicated by the indicator lamp above the button flashing. During the countdown, the drum will turn from time to time to re-distribute the laundry. To cancel or change the previously set time delay, set the programme selector knob to "Off" or open the door.

Indicator lamps

Filtro



Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning.

Clean the filter at the end of every cycle.



Time remaining display

Depending on the programme selected, once the drying cycle has been started, a default drying time is displayed. The time displayed is corrected by a few minutes depending on the volume, type and dampness of the laundry.

The drying time specified is a calculated value which will be updated during the drying programme.



The flashing lines indicate that the calculation is running. The remaining time will be updated.

6th sense



Overdry protection

The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programmes 10', 20', 30', 40', 60', 90' and "Airing".

"Airear/arejar".